

RIDER

AltRider DualControl Brake System for BMW F800/ F850 GS

INSTALLATION INSTRUCTIONS

The most up to date instructions can be downloaded from the product page at altrider.com, under the instructions tab.

Dear Rider,

Thank you for choosing Altrider! Whether a seasoned world adventurer or a first time ADV-Newbie, we welcome you to the Altrider experience. You can install your new product with the utmost confidence. Altrider designs, tests, and manufactures all of its products here in the United States. We are proud to do what we do, and honored to present to you the product of our labors.

≡njoy it, show it off, and most of all, RIDE IT!

Venture On, Jeremy LeBreton




Package Contents: - Dual Control - instructions - hardware kit

AltRider LLC

mailing:4000 Aurora Ave N Ste 100
Seattle, WA 98103 USAphone:206-922-3618email:info@altrider.comweb:www.altrider.com

Rev 0 MADE IN THE USA




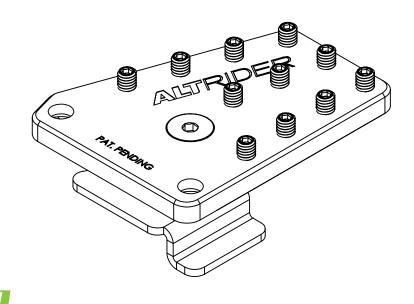

1


Enlarger Kit:

- (1) Brake Pedal Enlarger
- (2) (11) M4 x 8mm long grip pins
- ③ M5 x 20 flat head screw
- (4) Steel bottom plate
- (5) M5 washer
- 6 M5 lock nut

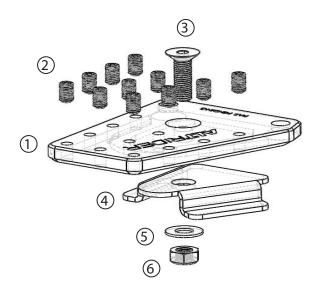


Riser Kit (Optional):

- 1 Riser block
- (2) (6) M4 x 8mm long grip pins
- (3) (2) M5 x 12 flat head screws

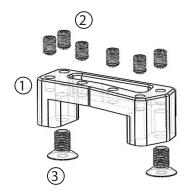





BMW F800/ F850 GS // DualControl // Installation Instructions

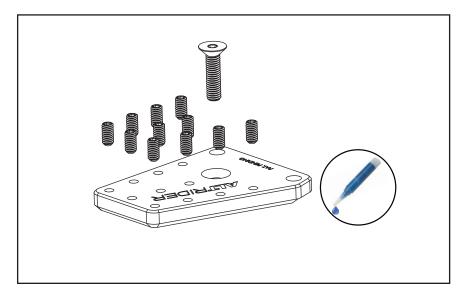


Install M4 x 8mm Grip pins, using 2mm Allen driver. Use a small dot of thread locker on each pin. Total number and placement is up to you. Tighten snug, but be careful not to strip the tool. Insert the M5 x 20mm flathead screw through the enlarger.

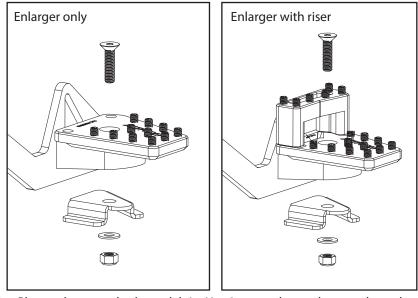

Place enlarger on brake pedal tip. Use 8mm socket tool to attach steel lower plate with M5 washer and M5 locknut. Tighten to 4.4Nm.

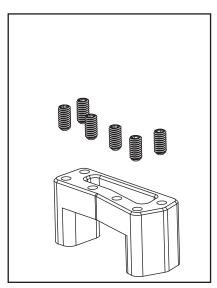

(A) If your kit is equipped with the optional Riser, install the grip pins in the riser now. Then apply drop of thread locker to the two M5 x 12mm flat head screws, and attach to the enlarger base.

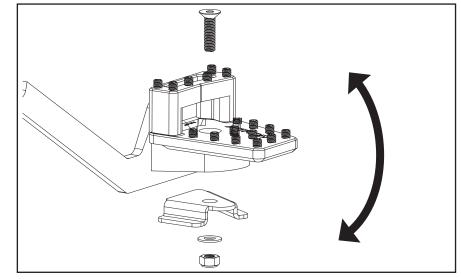

(4) Check brake pedal movement to be sure there is no interference with other parts of your bike. If the riser is installed, adjust your brake pedal height so that in the seated position you are using the enlarger, while in the standing position you will use the riser. Adjust your pedal height using the manufacturer's instructions to ensure correct procedure. It is important to set the correct free play to avoid caliper drag and potential brake failure.

CONGRATULATIONS!

You've completed your installation. If at any point you have questions about your installation or have any feed back for us, we'd love to hear it. A downloadable version of these instructions can be found at our web site. www.AltRider.com

After 5 hours or 100 miles of riding, check your newly installed equipment to ensure all hardware is secure.

Global Office:

email:	info@AltRider.com
phone:	+1 206-922-3618
address:	4000 Aurora Ave N
	Ste 100
	Seattle, WA 98103

TERMS OF USE, WARRANTY AND LIABILITY WAIVER

AltRider LLC, a Washington company, having its principal place of business in Seattle, WA ("AltRider") offers its motorcycle accessories (the "Product") with the terms, conditions and notices as follows:

Terms of Use

This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions, and notices contained herein. Installation and/or use of this product implies acceptance of all such terms, conditions, and notices. If you do not agree to these terms, do not buy the Product. If you have already bought the Product and do not agree to these terms, return this Product promptly including the packaging and all written materials, to AltRider. Limitation of Liability and Warranty Disclaimer

You may return your merchandise for a full refund or exchange, less any original or return shipping fees under these conditions:

1. Only if the merchandise is in 100% factory condition. Original manufacturer's packaging and same condition as sold – original boxes, packaging material, instructions, documentation, parts, and attached tags.

2. Only unused, unscratched, uninstalled, undamaged merchandise will be accepted. Do not install equipment until you are sure you want to keep it. Package items carefully in protective materials before returning them. Never ship an item in its original manufacturers packaging – it will arrive damaged. Please use a postal box or other adequate packaging to ensure your return or exchange is not damaged on the way ba ck to AltRider.com.

To read more about our exchanges and returns policy, on the web, navigate to http://www.altrider.com/info/exchangesAndReturns

Excepting the warranties stated in the preceding paragraph, AltRider hereby disclaims all other warranties and conditions with regard to the Product including all implied warranties and conditions of merchantability and fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof. AltRider does not warrant against damages or defects arising out of use or installation of the Product. Installation instructions are provided for your convenience. AltRider is not responsible for any damages arising out of the installation, improper or otherwise, of the Product. No warranty of any kind, expressed or implied, is made regarding the safety of this Product.

To the extent allowed by law, AltRider shall not be held liable for any direct, indirect, punitive, incidental, special or consequential damages arising out of, or connected with, the use or misuse of this Product. Buyer assumes all risks and liability arising from use of this Product.

Entire Agreement

This document states the entire obligation of AltRider with respect to the Product. If any part of this agreement is determined to be void, invalid, unenforceable or illegal, including, but not limited to the warranty disclaimers and liability limitations set forth above, then the remainder of the agreement shall remain in full force and effect.

Applicable Law

This agreement is governed by the laws of Washington, USA. You hereby consent to the exclusive jurisdiction and venue of the courts of Washington, USA, in all disputes arising out of or relating to the use of this product.

Europe

mailing:	Heliumstraat 230
	2718 RS Zoetermeer
	Netherlands
email:	info@altrider.eu
web:	www.altrider.eu



